

Integrated Telephone System

Operating Instructions

Model No. **KX-TS500ML**

Pulse-or-tone dialling capability



KX-TS500MLW

PLEASE READ BEFORE USE AND SAVE.

For your future reference

Serial No.
(found on the bottom of the unit)

Date of purchase

 
Name and address of dealer

Panasonic System Networks Co., Ltd.
1-62, 4-chome, Minoshima, Hakata-ku,
Fukuoka 812-8531, Japan

PQQX13853WA FM0603NK31013

1 Getting Started

1-A Location of controls

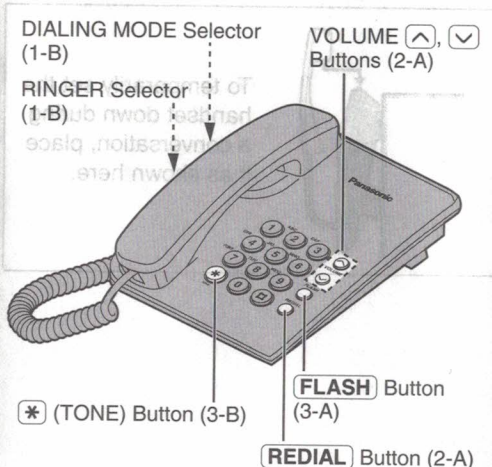


Accessories (included)


- | | |
|---|--|
| <input type="checkbox"/> Handset one | <input type="checkbox"/> Telephone Line Cord one |
| <input type="checkbox"/> Handset Cord one | |

1-B Settings

 
- 1 Connect the telephone line cord (①).
- 2 Connect the handset cord (②), then confirm the dial tone.

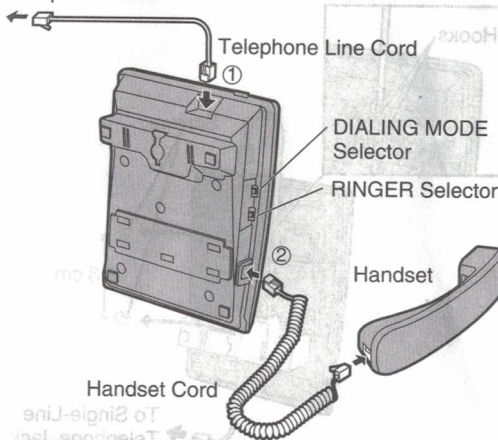

 - 3 Set the DIALING MODE selector to TONE.
 - If you cannot dial, set to PULSE.



 - 4 Set the RINGER selector to HIGH, LOW or OFF. (Ex. "LOW" is selected.)
 - When set to OFF, the unit will not ring.



2 Operation

2-A Making Calls

- 1 Lift the handset.
- 2 Dial a phone number.
 - If you misdial, hang up and start again from step 1.
- 3 When finished talking, hang up.

To redial the last number dialled
Lift the handset. → Press **REDIAL**.

To adjust the receiver volume (4 levels) while talking

- To increase, press **▲**.
To decrease, press **▼**.
• After hanging up, the volume level will be saved.

2-B Answering Calls

- 1 When the unit rings, lift the handset.
- 2 When finished talking, hang up.

3 Special Features

3-A For Call Waiting Service Users

Press **FLASH** if you hear a call-waiting tone while talking.

- The first call is put on hold and you can answer the second call.
- To return to the first caller, press **FLASH** again.

3-B Temporary Tone Dialling (For Rotary or Pulse Service Users)

Press ***** (TONE) before entering access numbers which require tone dialling.

- The dialling mode changes to tone. You can enter numbers to access answering services, electronic banking services, etc. When you hang up, the mode will return to pulse.